

For Terminals

Dejavoo will need to set up the RKL request in the system and invoice for it.

Email both the Terminal(s) Serial # and the Encryption Key to your **Dejavoo sales executive**

From terminal idle prompt screen “Credit / Sale”

1. Press the green OK key to access the application Core Menu.
2. Select Applications.
3. Select Credit/Debit/EBT.
4. Select Setup. Manager password by default is “1234”.
5. Select Security.
6. Select Inject Keys.
7. Select Remote Injection.

Select Certificate Management

1. Select RKL. Register (application will display “Terminal Signing: generate signing CSR” for about 18 seconds while it creates the certificate) Application will display “Terminal Signing: generate Encryption CSR” for about 8 seconds.
If device says Certificate Already exists, you should be able to skip to next section DOWNLOAD DEBIT KEYS.
2. This will be followed by a login prompt (you will receive login 1 and login 2 credentials from your Dejavoo account executive via email) Terminal will display “Terminal Signing: Loaded” after the terminal has successfully created a certificate.

To download Debit Keys

1. Terminal will be in Certificate Management menu. Press yellow key to navigate 1 menu back.
2. Select RKL Load Keys.
3. When terminal is completed it will display “Key Loading Succeeded”.

Note: Prior to “Download Debit Keys” you may need to go SETUP REMOTELOAD. Then SELECT DEVICE Group Name and choose the key you are trying to encrypt.