

Turn off "Beep on Key Press"

Step	Action	Display
1.	Press the [MENU] button	MAIN MENU: 2. Merchant Settings 3. Operation Settings 4. Hosts Settings 5. System Settings
2.	Press [3] for Operation Settings	OPER. SETTINGS: 1. No-Paper Mode 2. Buzzer Setup 3. Operation Mode 4. Battery Saver
3.	The default is on. Press [1] to disable the buzzer or [2] to enable the buzzer.	Buzzer Setting: 2 1. OFF 2. ON